

USB DAP Quick Install

(Full installation guide in *DAPtools Software manuals*)

1. Verify that all parts are available.

xDAP - power cord - USB cable

2. Verify that you have current software:

mstarlabs.com/software/new.html

- *Windows*: XP, Vista, Server 2008, 7, 8, 10,
- *DAPtools*: Basic, Standard, Professional




3. Install software.

- Run setup.exe from DAPcell installer medium
- Click "Getting Started" and review briefly
- Select "Install DAPcell Server"

Accept suggested install locations
Review and approve choices
Wait for software to install
Accept default driver stub option
Wait for enumeration of DAP devices
Select "Finish"

- Exit the setup application.

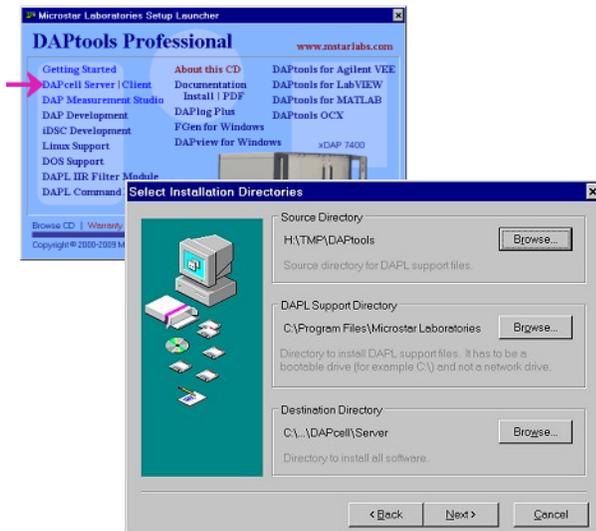

4. Install xDAP hardware.



- Attach USB cable to xDAP front socket
- Attach USB cable to host USB port
- Attach power cord to outlet
- Attach power cord to xDAP rear panel
- Turn on power switch on xDAP rear panel
- Press power/standby switch on xDAP front panel




5. Verify xDAP configuration.

- Let Windows recognize and install new devices
- Run *Data Acquisition* in the Windows Control Panel
- Under "control tab," verify that the DAP server is running
- Under "browser tab," verify that xDAPs are detected.

If not ---

reboot system, and repeat "Verify xDAP configuration"

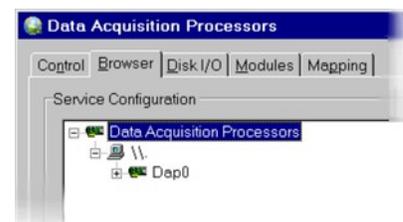

6. Power down, and install signal cables.

XDAPQUICK200

Copyright © 2009-2015, Microstar Laboratories, Inc.